

# Quick Start

Using your SLP 440 and 450 with Windows® 2000, XP, 2003 Server 2003, Vista and Windows 7 or Mac OS® X 10.2 or later.

*Install the software before connecting the SLP printer to your computer.*

## Installing the Smart Label Program for Mac OS X

- 1 Insert the Smart Label CD. If the installer does not appear automatically, double-click the CD on your desktop or in the left pane of a new Finder window.
- 2 Double-click the file *SiISmartLabelPrinter.mpkg*. The installer will appear. Follow the on-screen instructions.
- 3 For Mac OS X 10.2: After installation is complete, open *Print Center* and select your SLP printer. Mac OS X 10.3 or 10.4 will automatically set up your printer.

## Installing the Smart Label Program for Windows

- 1 Insert the Smart Label CD. The installation wizard starts automatically on most systems. If the introductory screen doesn't appear after a few seconds, continue with the following steps.
- 2 Click the Windows *Start* button then point to *Settings* and choose *Control Panel*.
- 3 Double-click *Add/Remove Programs* then click the *Install* button. Follow the install wizard to assist with installation.

## Preparing the SLP

- 1 Install the software, then connect the printer to your PC or Mac.
  - The SLP can be connected to the USB port on your PC or Mac.

- Connect the other end of the cable into the appropriate port on the back of the SLP.

- 2 Connect the supplied AC adapter to the back of the SLP and to a power outlet.

- 3 The printer powers on automatically when connected to AC power. The status light will flash until the labels are loaded.

- 4 Lift the label cover.



- 5 Load a roll of standard labels.

- Remove the sticker from the roll, and then place the roll on the spindle as illustrated. Adjust the label guides to fit against the roll.

- Feed the labels into the slot on the back of the printer. The labels automatically feed to the exit slot, then stop.

- Close the label cover.

- 6 Start your SLP software and begin using your new SLP. If you want to run a test label, please refer to the FAQ "Test Labels" on our website: **[www.siibusinessproducts.com](http://www.siibusinessproducts.com)**.

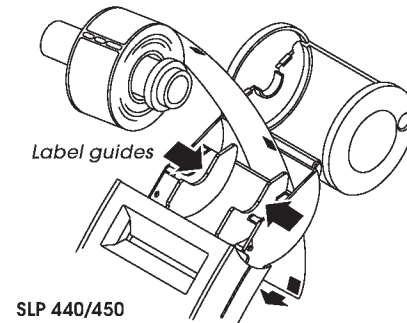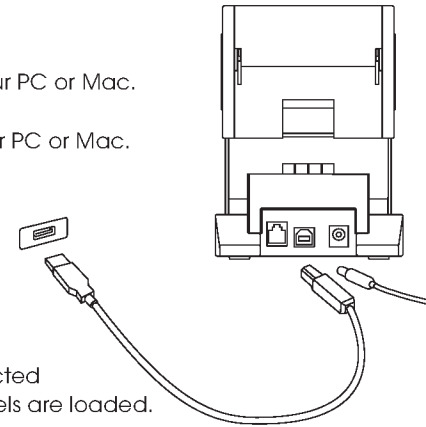

## Your First Address Label (Mac OS X)

- 1 Double-click the *Smart Label Printer* Application.

- 2 The default address label will appear. (Screen at right.) To clear this template, press *Delete*.

 
- To change your label template, select a label from the *Templates* or select *New* from the *File* menu.

- To change the font or text, select 

- To add a bar code, select 


- 3 Click  to print the label.


- 4 Select *Save* from the *File* menu to save the label.

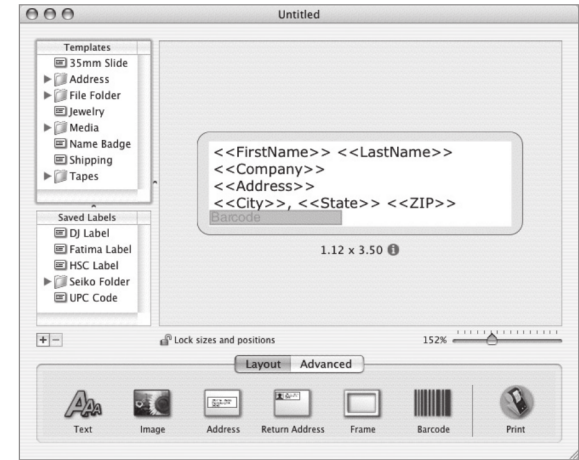

## Your First Address Label (Windows)

- 1 Click the Windows *Start* button then point to *Programs* and choose the *Smart Label* program, or select the Smart Label icon on your desktop.

- 2 Click  to begin a new label.

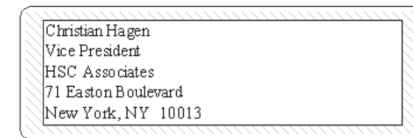

**Note:** *The address is automatically entered into fields in the Contact information window.*

- 3 Type the address.

To customize the label, click one of the Smart Label Icons:™

- Click  to add additional information.

- 4 Click  to print the label.

- 5 Click  to Save the label.



Seiko Instruments USA Inc.


©2011 Seiko Instruments USA Inc. All rights reserved. Specifications subject to change without notice. "SII" is a registered trademark of Seiko Instruments Inc. "Smart Label Printer" is a registered trademark and "SmartLabels", "SmartCapture", "SmartCopy" and "Smart Label Icons" are trademarks of Seiko Instruments USA Inc. Other brand and product names are trademarks or registered trademarks of their respective holders. Printed in U.S.A. Part Number: 20-40159-07 v10262011

# Quick Tour

## Label Objects for Mac OS X





Object buttons are used to add different elements to the labels. The object buttons appear in the layout palette at the bottom of the Main Window.

- Click an object button, define its attributes in the drop down sheet and click *OK*.

- To modify an object on the label, click the  button to the right of the object.
- To change the import characteristics, double-click the object.

- Drag handles to resize the object or drag the object to move it.


- To adjust text objects, click one of the following buttons to the right of the handles:

-  Text object properties sheet will appear.
-  A pop-up menu for text alignment will appear.
-  A pop-up menu for fonts will appear.
-  A pop-up menu for font size will appear.



## How To's

**Create a New Label.** Click a Smart Label Icon in the *Templates* list or create a new format by adding objects. Click  to add an address or  to add a picture, for instance.

**Save Labels in Folders.** Click in the *Saved Labels* list. Click the  button and name the folder. Drag saved labels to this folder.

**Save a Template.** Choose *Save Template...* from the *File* menu. Name the template and click *OK*.

**Edit a Saved Label.** Click the label in the the *Saved Labels* list and edit as shown above.

**Print Saved Labels.** Click the label in the the *Saved Labels* list then click the  button.

**Print Labels from Another Application.** Click on *Advanced* button located near the bottom of the window. Choose the program from which to print the labels. Select the labels from the list and click *OK*.

## Label Objects for Windows

Object buttons are used to add different elements to the labels. Choose from six different elements: Smart Text, Format Text, Picture, Bar Code, Return Address, Frame.

To use the object buttons:

 
- Click one of the object buttons, then position pointer at desired location on label. Left click and hold the mouse to draw the object box on the label.

- Position the pointer over an object and right click the mouse to open the object's shortcut menu.

- Choose *Properties* to open the Properties dialog box.

- For text objects, choose *Move/Resize* to adjust the object.

- Drag handles to resize the object or drag the object to move it.

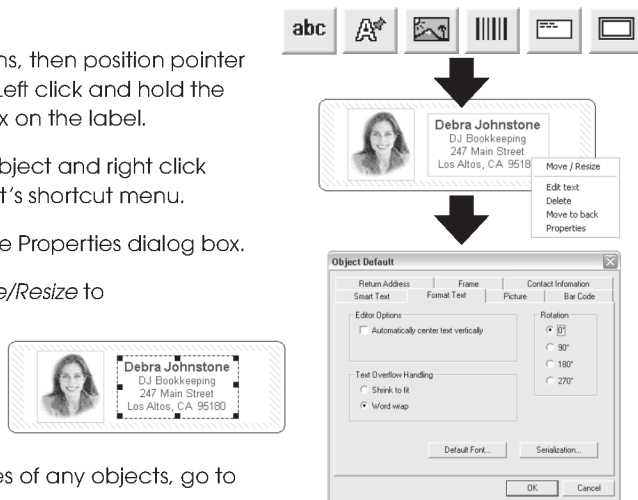


To change the default properties of any objects, go to *Options* then *Object Defaults*.

## Smart Label Icons

 Smart label icons are shortcuts to popular label templates. Twelve preset template can be used for the seven icons.

- To use a icon, simply click on the icon and the label template will be changed.
- To customize your icons, go to *Options, Settings*. Click on the *Toolbar* tab. Click on the *Format* button you would like to change, and click the desired icon from the *Formats* menu.

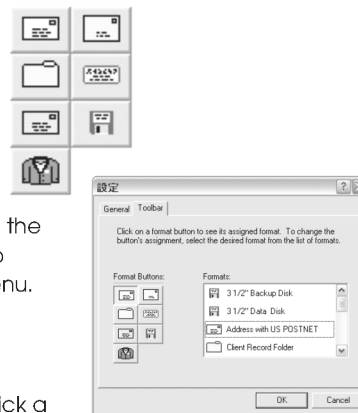



## How To's


**Create a New Label.** Click . To change the format, click a smart label icon or select *New* from the *Label* menu.

**Save Labels in Categories.** Select the category when you save the label. To add new categories or modify the existing names, choose *Library* then *Define category names* from the *Label* menu.


**Print Saved Labels.** Choose *Print selected...* from the *Label* menu and select the label you want to print.

**Open a Saved Label.** Click  and select the label that you want to open. The label may be edited and printed. To access or change the contact information (e.g., add phone numbers, etc.) click .

**Save Changes to the Label Format.** From the *Format* menu, select *Save Format*. The *Save Format Wizard* appears where you can assign a name and icon to the format.

**Capturing Addresses and Copying Text.** Click on the *SmartCapture™* icon  in the notification area of the Windows Taskbar to capture addresses or *SmartCopy™* selected text from other programs. Some programs may require you to highlight the text to be captured and then click on the *SmartCapture* icon.

## Changing Labels

- Tear off any printed labels so the labels are flush with the exit slot. Press and hold the  button to reverse the labels out the back of the printer. **DO NOT** pull the labels out of the printer. Load the new roll as described on the front of this card.

- To select a different label type in the Smart Label program:  
**Windows:** Choose *Properties* from the *Label* menu or select the label type from the pull-down list at the bottom of the window.  
**Mac:** Choose the label from *Templates* menu

- The print margins can be adjusted if the printing isn't positioned properly when the label is printed, particularly on small labels. To adjust the margins, choose *Print* from the *Label* menu then click the *Setup* button. Click the *Advanced* tab to adjust the print margins.

## About Your Labels

- The SLP 420, 430, 440 and 450 can use any of the *SmartLabels™* provided by Seiko Instruments. The SLP 410 can use labels up to 1-1/8 inches (28mm) wide. The default settings for the Smart Label Icons provide examples of how you might use the different label types.

**Important:** For best results we recommend the use of Seiko Instruments SmartLabels. Other brands may not be engineered to provide optimum, trouble-free results, they may not work with your SLP or they may damage it and void your warranty.

- SmartLabels are available from your local Seiko Instruments dealer or they may be ordered from Seiko Instruments. For information call:

(800) 688-0817 in USA and Canada

Or visit our website at [www.siibusinessproducts.com](http://www.siibusinessproducts.com)

## What to do if...

Refer to your *Smart Label Printer User Guide* or the on-line help if you have a problem or need additional information when using your SLP.

To access on-line help, choose *Help Topics* from the *Help* menu.